

# All Porsche 981 Boxster & Cayman Models Stainless Steel Sports Side Vent Grille Kit

**Kit Contents: -**

- 2. off Side Vent Grille



**YouTube Tutorial:**

[https://www.youtube.com/watch?v=m60l\\_cU1CgE](https://www.youtube.com/watch?v=m60l_cU1CgE)



**Side Vent Mesh Grille Fitting Instructions**

1. Fit masking tape around the apertures to protect the paintwork while fitting.
2. Locate upper fixing bracket behind the aperture (Fig 1).
3. Carefully guide the grille so that lower and side brackets locate behind the aperture.
4. Using a thin screwdriver through the mesh lever the 3 brackets so that they have clipped behind the aperture and the grille is secured tightly into position (Fig 2,3 & 4).
5. Repeat for opposite side grille.
6. Remove the tape and the grilles are now complete.



Fig 1



Fig 2



Fig 3

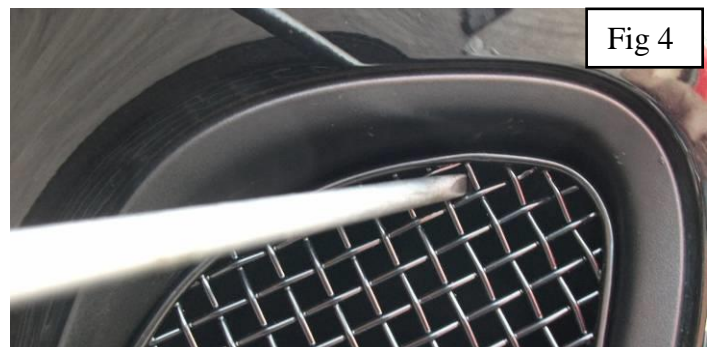


Fig 4